

Handy Store Fixtures Saddle Mount Extender Assembly Instructions


Assembly Instructions:

Please Note: The Handy Saddle Mount Extender fits over the Upright of any Gondola manufacturers' fixtures.

1. Remove the existing Top Cap.
2. Add the Saddle Mount Extender to the existing Upright, align the slots and slide the key into the slots.

Please Note: A hammer may be required for the key to be locked in.

3. Key should not be able to be pulled out by hand.

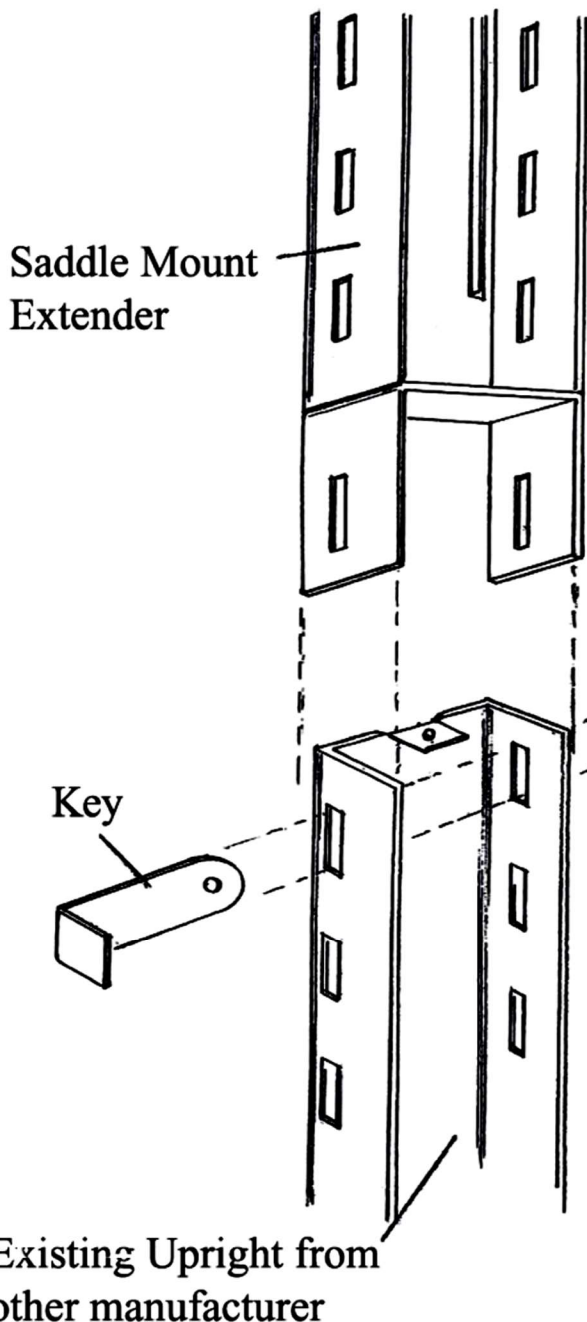

Handy®
STORE FIXTURES

MANUFACTURING STORE FIXTURES SINCE 1952

Handy Product Support: (908) 474-1343; Hours of Operation Mon - Fri 8:00 a.m. to 5:00 p.m.

www.handystorefixtures.com