

Handy Store Fixtures Gondola

Assembly Instructions


Master Parts List:

1. End Upright with End Shoe (#2) bolted to Upright
- 1A. Center Upright with Center Shoe bolted to Upright
2. End Shoe (Base Shelf Rail on one side of Shoe)
- 2A. Center Shoe (Base Shelf Rail on both sides of Shoe)
3. Spacers
4. Back Panel Stop Cap
5. Front Toe
6. Base Shelf
7. *Back Panel



*NOTE: If unit consists of 3/4" factory pre-grooved Slatwall, special spacers (#3) are required for the Slatwall to fit in Uprights. If not, Slatwall will be 1/4" forward of the Uprights. (ALL DSF SHELVES WILL WORK).

8. Top Cap (remove screws from Uprights and replace)
- 9 Leveling Screws (shipped in shoe)

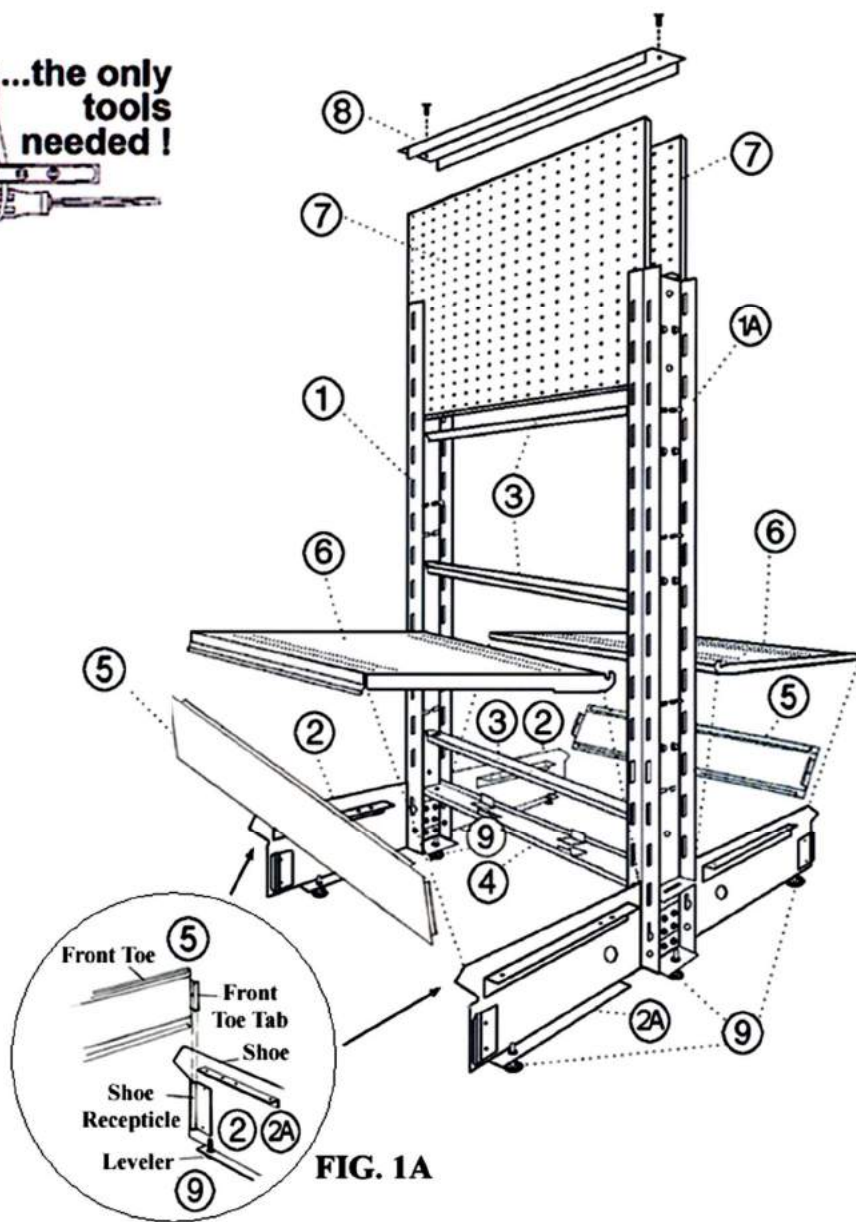

Assembly Instructions:

- A) Insert Back Panel Stop Cap (#4) into Uprights. (#1, #1A)
- B) Insert Spacers (#3) into Uprights. (#1, #1A)
- C) Slide Front Toe (#5) into Shoes. (#2, #2A) *See Figure 1A*
- D) Slide Back Panel (#7) from top into Upright, (#1, #1A) then bend and slide into the other Upright. (#1, #1A)
 - * NOTE: (If 1/4" Back Panel is more than one piece, place Plastic Divider Bar (not shown) between Back Panels. (#7))
- E) Screw Top Cap (#8) into Uprights. (#1, #1A) (screws are shipped in Uprights)
- F) Level the unit horizontally and vertically.
 - F1) First level outer leveling screws, then adjust middle leveling screw.
- G) Hook in Base Shelf (#6) and seat properly.

Handy[®]
STORE FIXTURES

MANUFACTURING STORE FIXTURES SINCE 1952

Handy Product Support: (908) 474-1343; Hours of Operation Mon - Fri 8:00 a.m. to 5:00 p.m.

www.handystorefixtures.com